
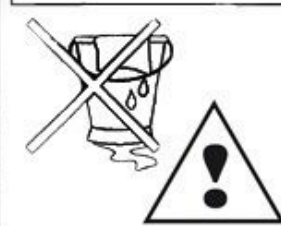
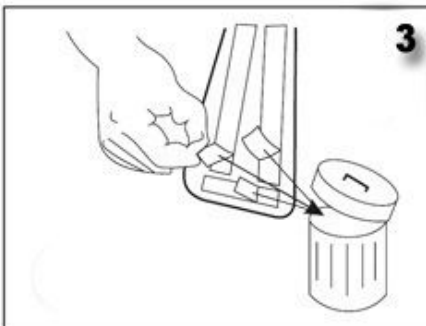
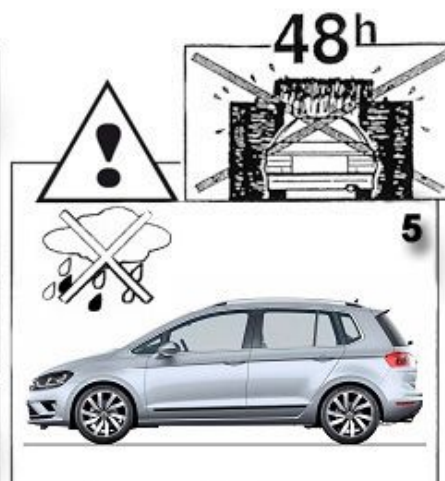
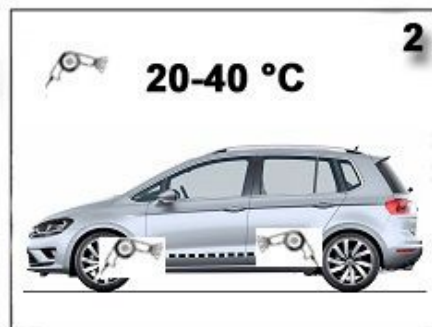


Volkswagen Golf Sportsvan 2014→

PU Side Mouldings

F-11

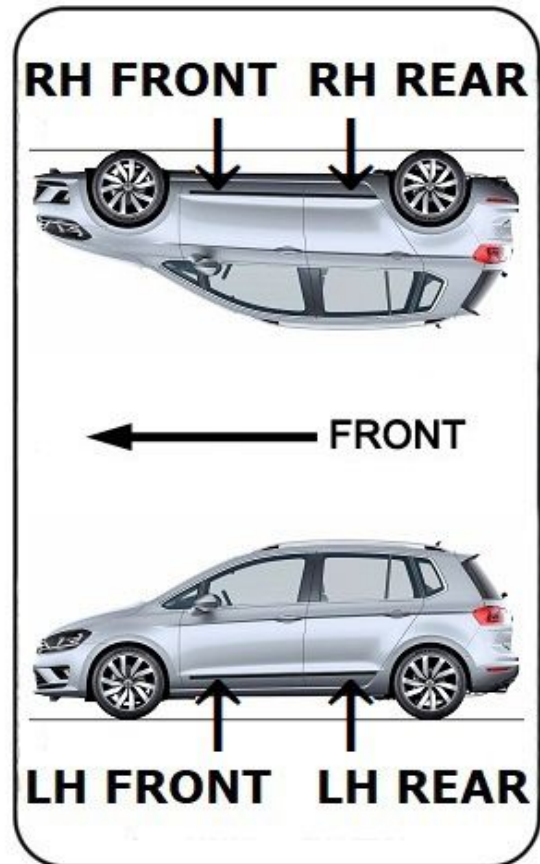

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

