
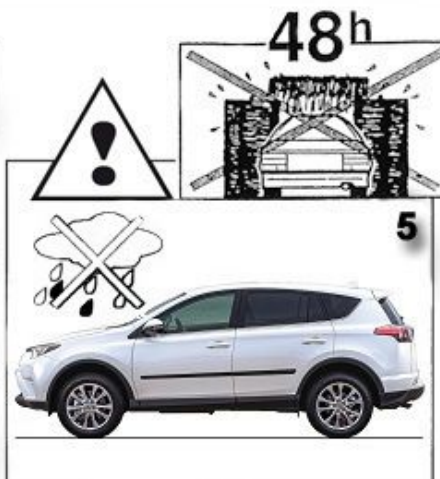
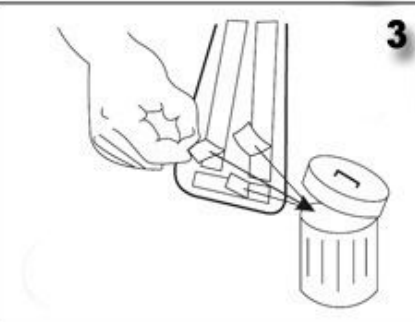
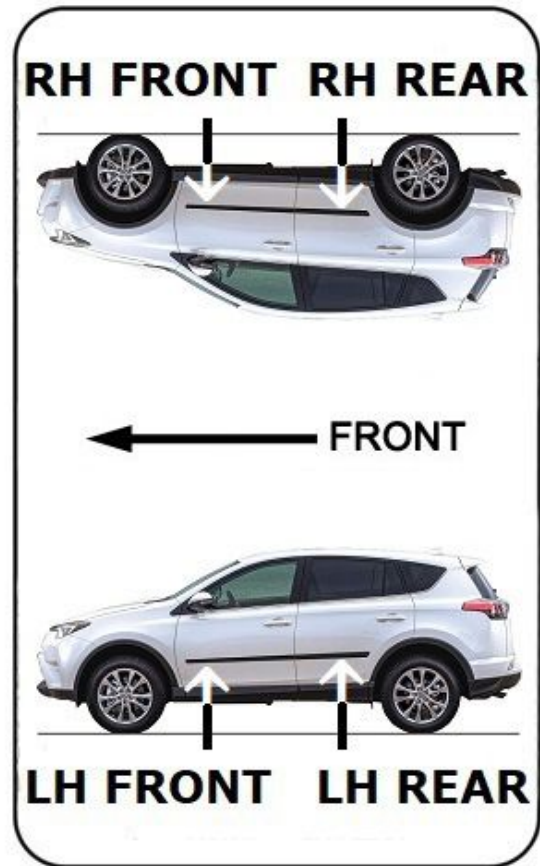


Toyota RAV4 2013-18

PU Side Mouldings

F-3

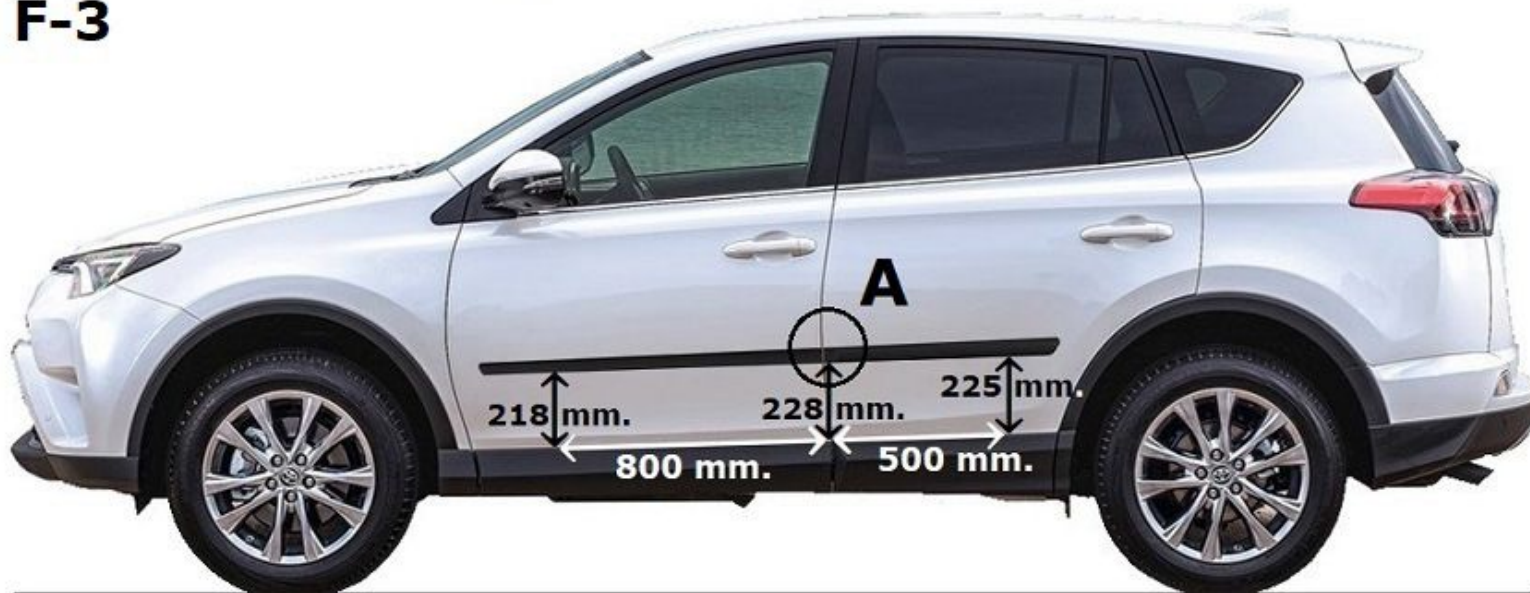

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

