

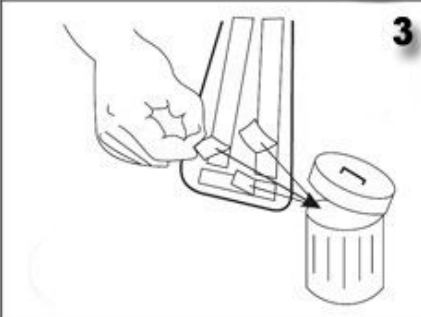
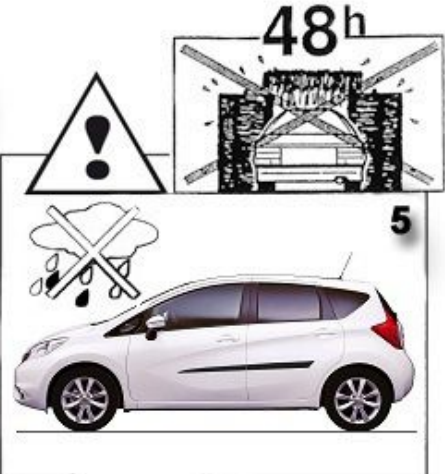
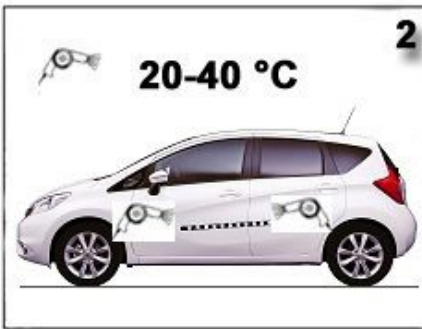


# Nissan Note II 2013→ PU Side Mouldings F-32

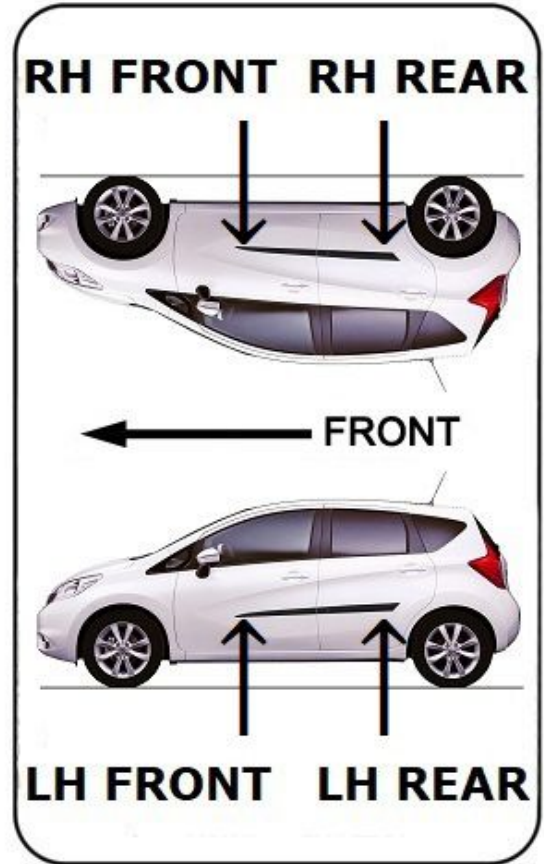

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!

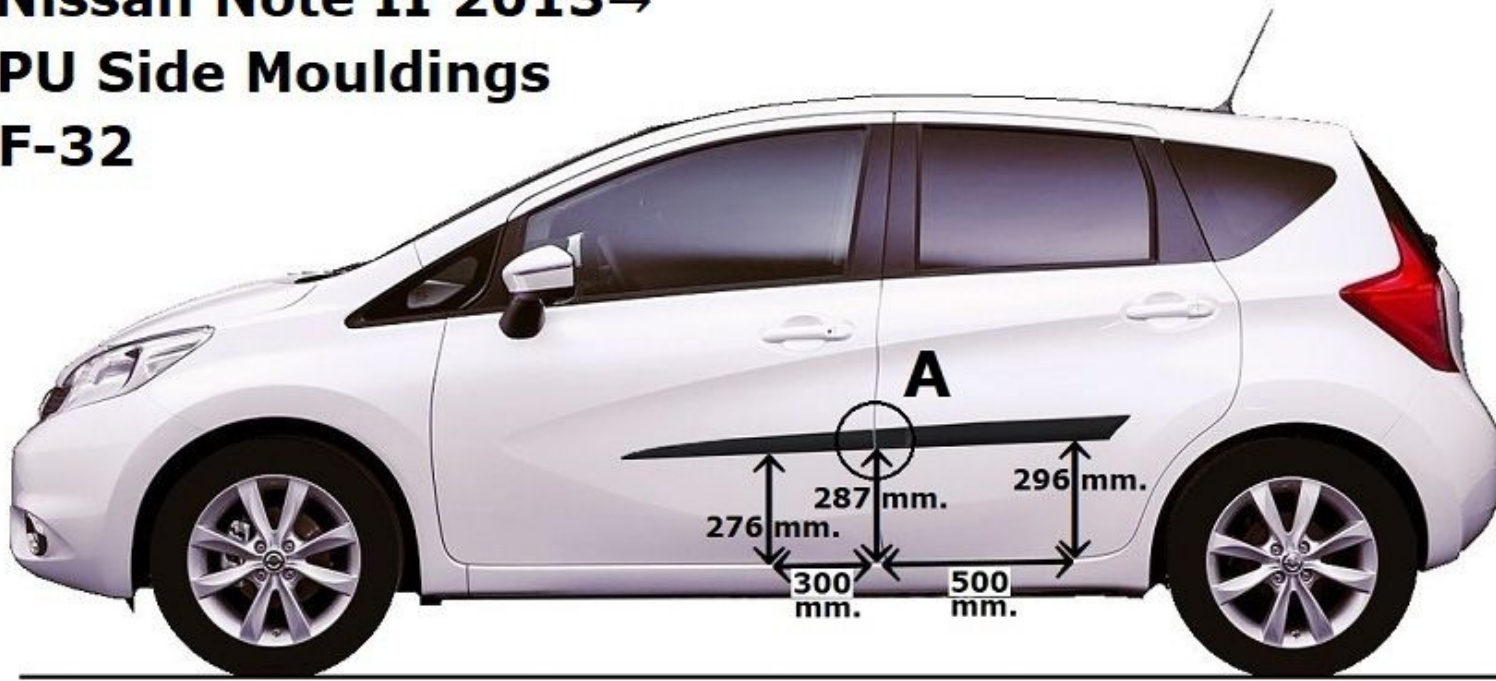