



# Chevrolet Cruze HB 2012→16

## PU Side Mouldings

### F-1

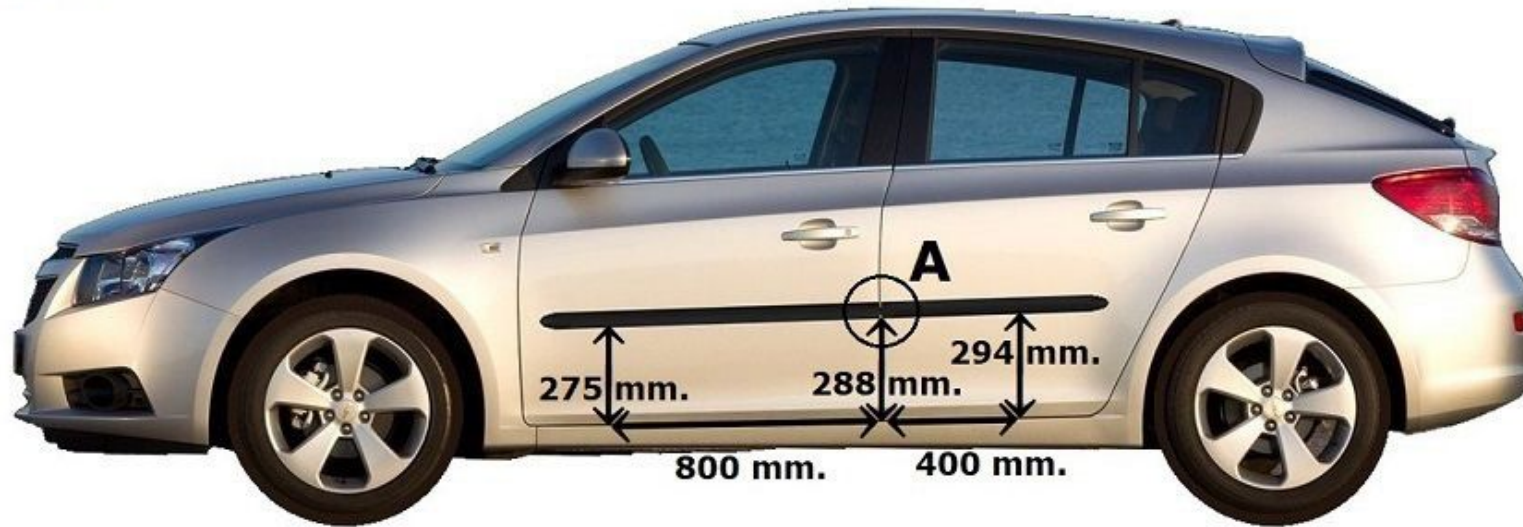

RH FRONT RH REAR

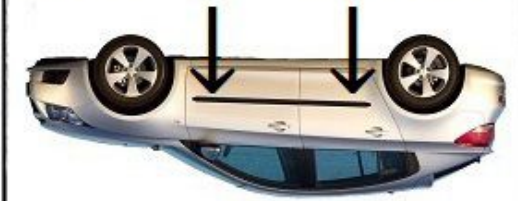

← FRONT



LH FRONT LH REAR

Degrease/entletten/degraisser/ontvetten  
Alcohol/Alkohol/Alcool/Alcohol

1



20-40 °C

2




48h



5



3

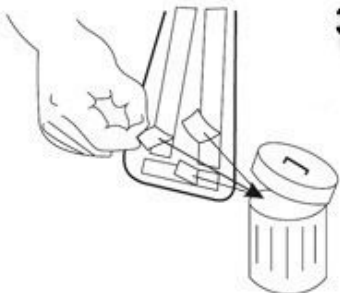


4



ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!

1 mm.

A

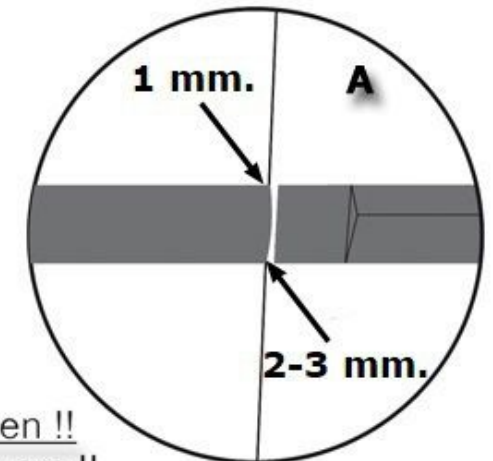

2-3 mm.