


Chevrolet Cruze SW 2011-16

PU Side Mouldings

F-1

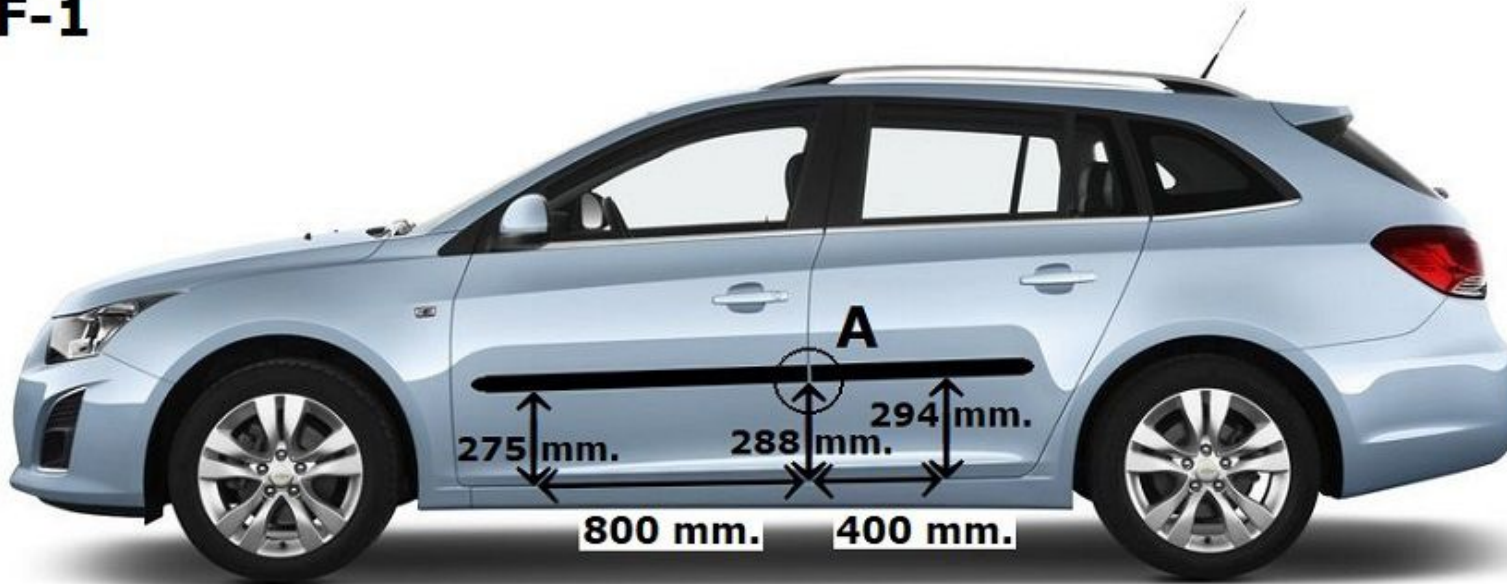



RH FRONT RH REAR



← FRONT



LH FRONT LH REAR

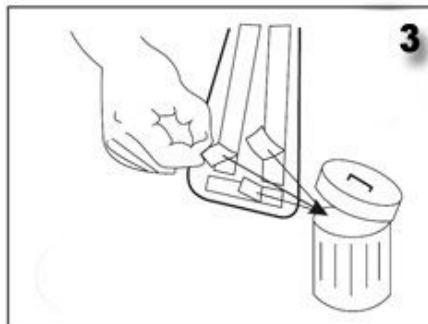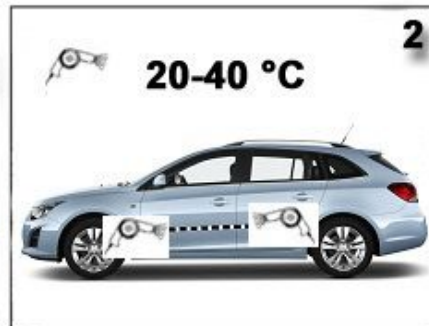

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

