

# Subaru Forester IV 2013 ↑ PU Side Mouldings



1 Degreaserentleiten/degreasserfortvetten  
Alcohol/Alkohol/Alcool/Alcohol



2 20-40 °C






3 48h



4



5

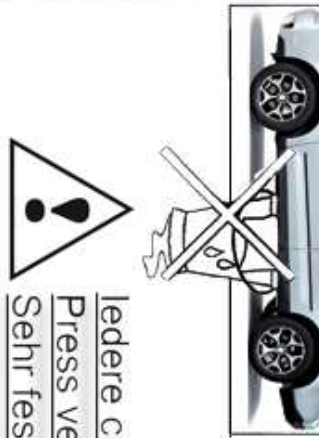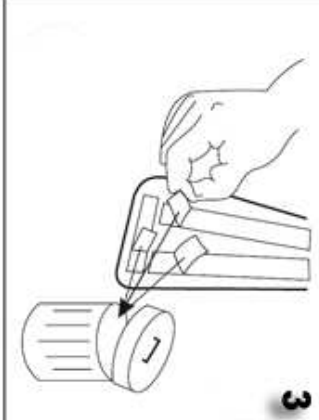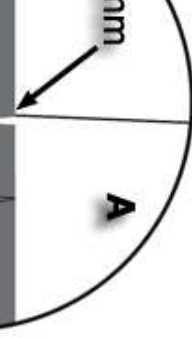

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrucken jeden cm !!

