
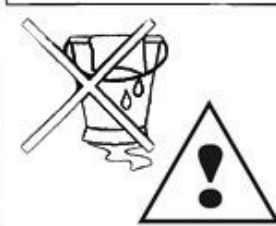
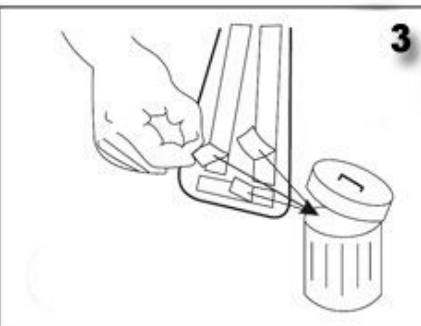
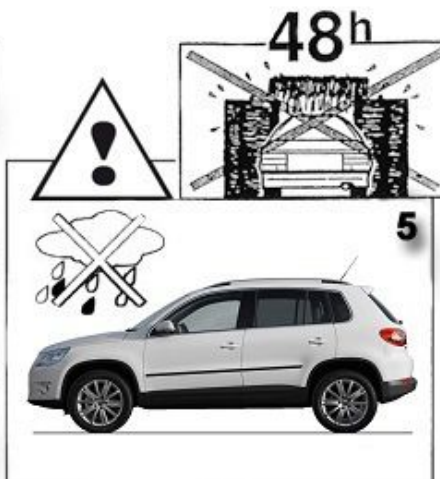
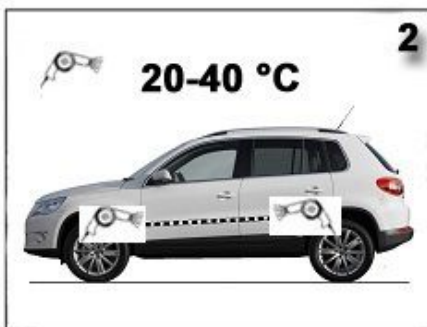


Volkswagen Tiguan 2007-15

PU Side Mouldings

F-11

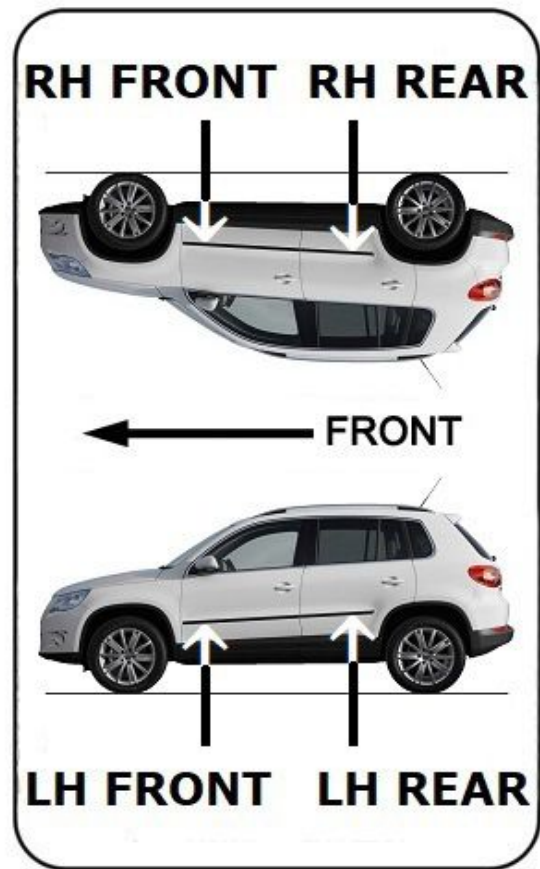

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

