
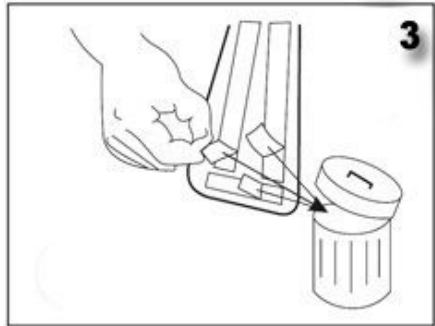
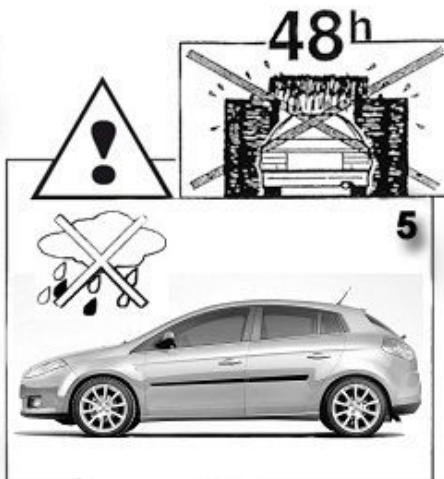
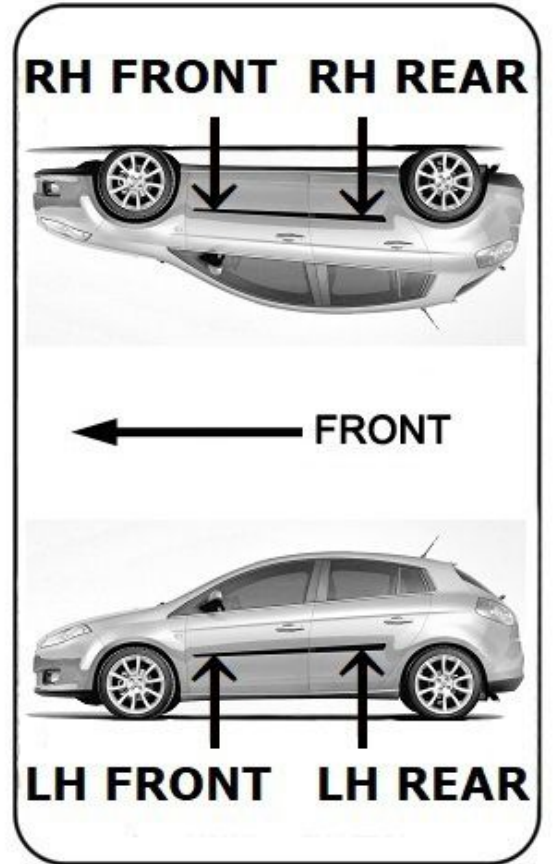


Fiat Bravo 5D 2007-11

PU Side Mouldings

F-14

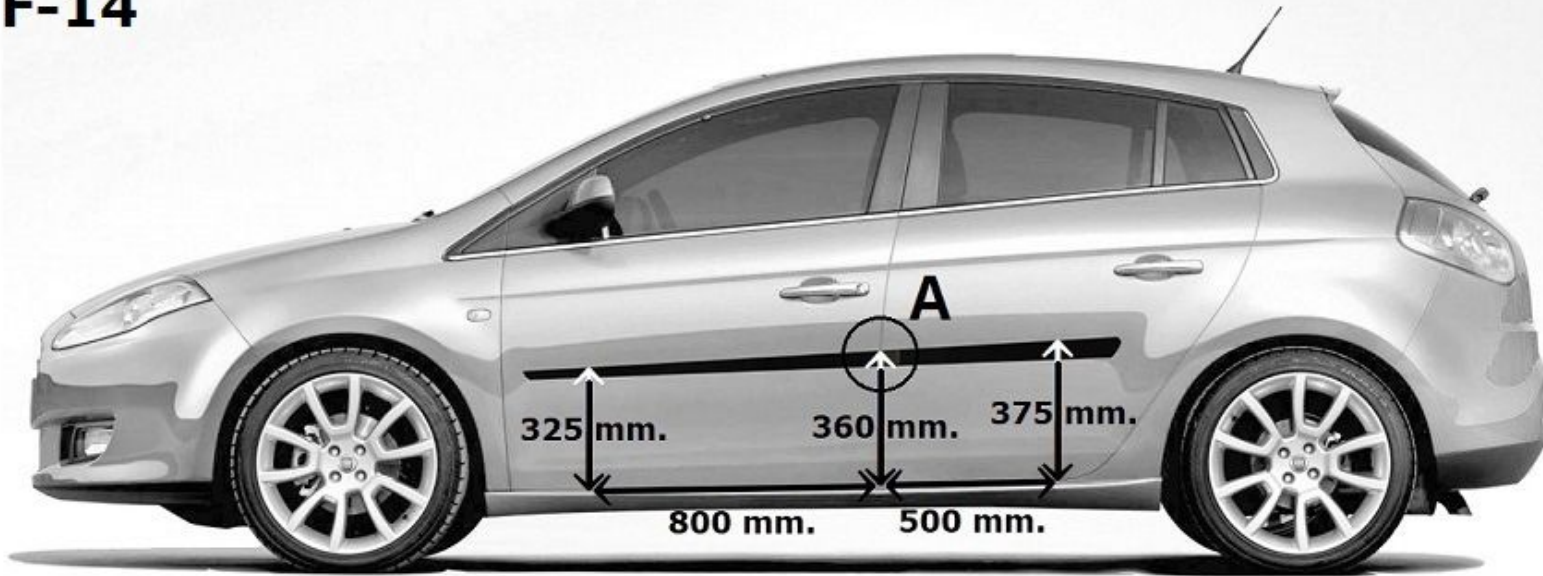

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

