



Peugeot 301 2013→ PU Side Mouldings F-20

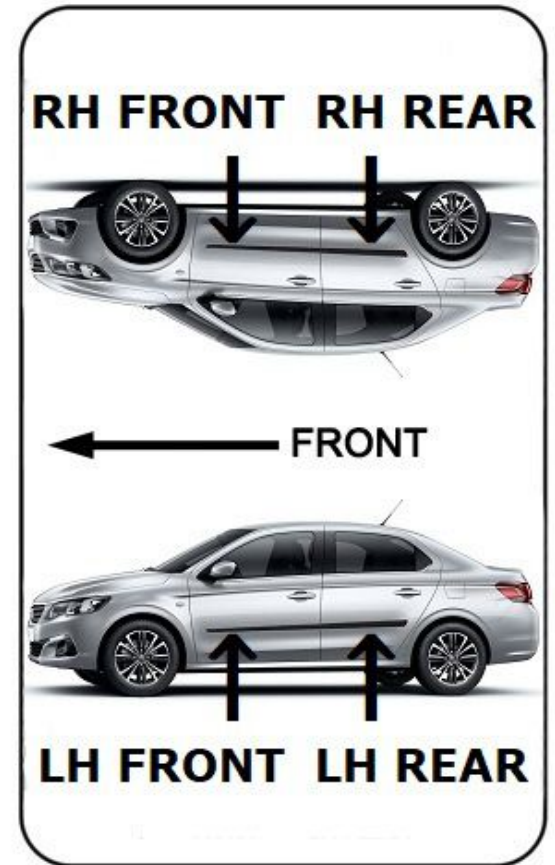

Degrease/entletten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

1

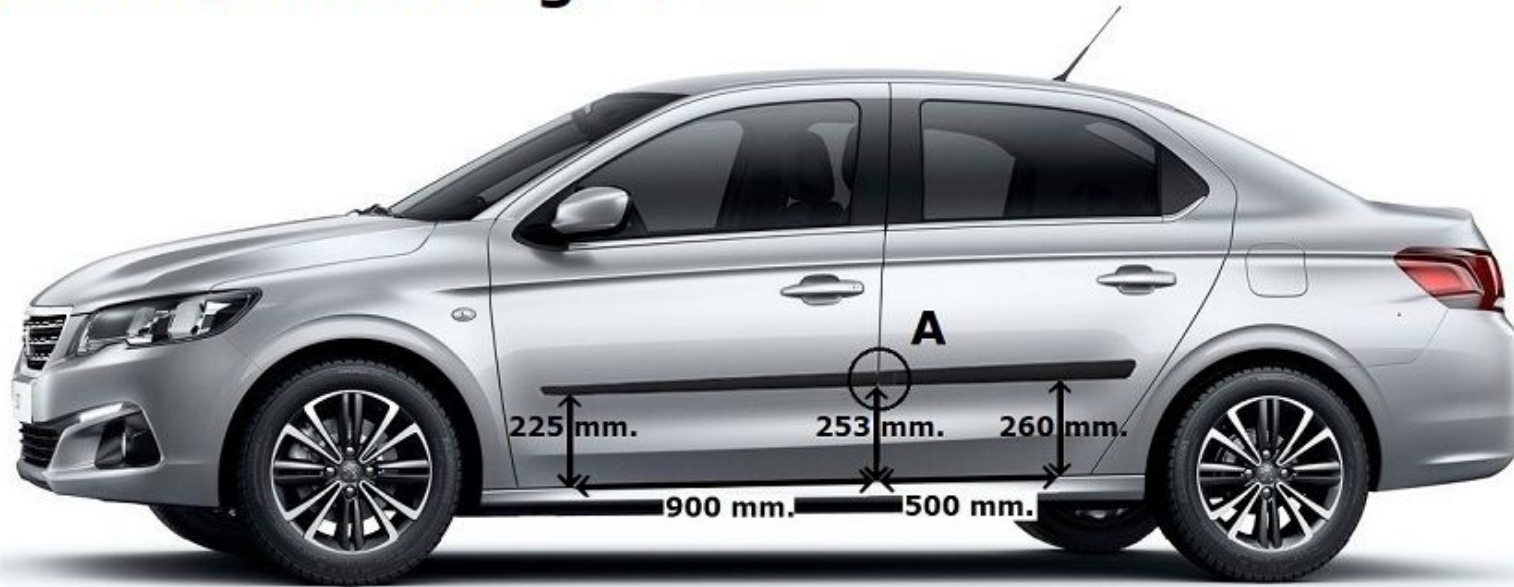

20-40 °C

2



48h



5



3



4



ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

