
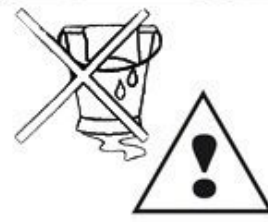
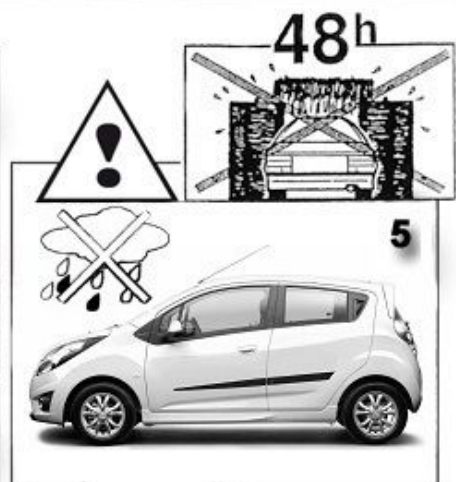
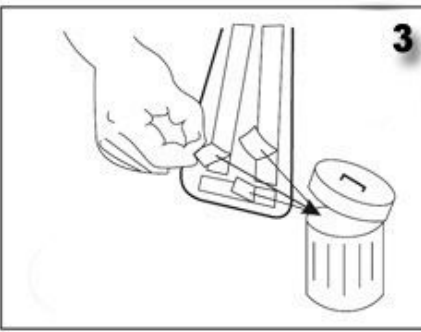
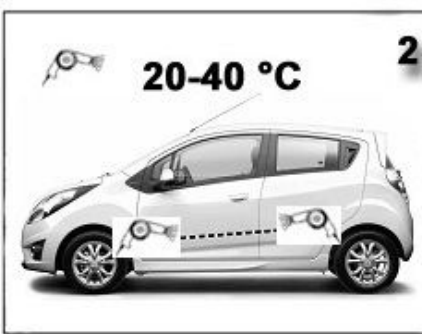
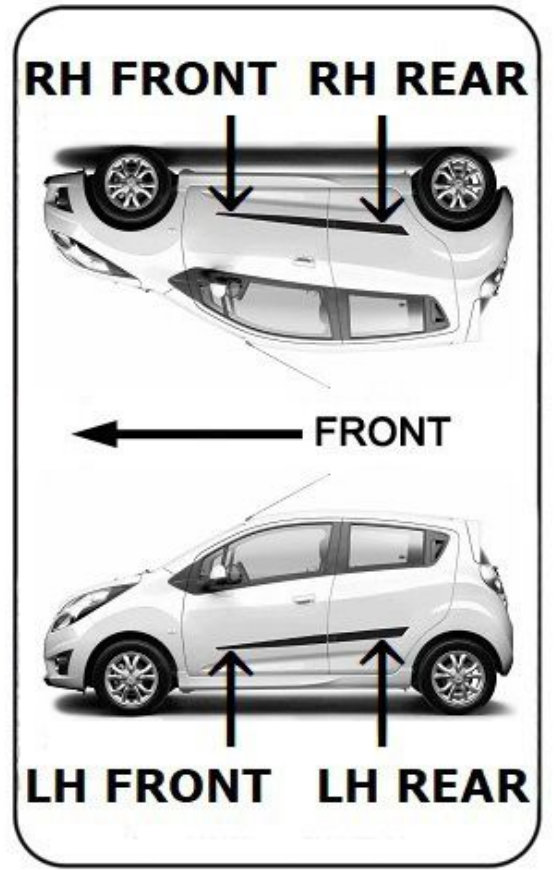


Chevrolet Spark 2009→15

PU Side Mouldings

F-29

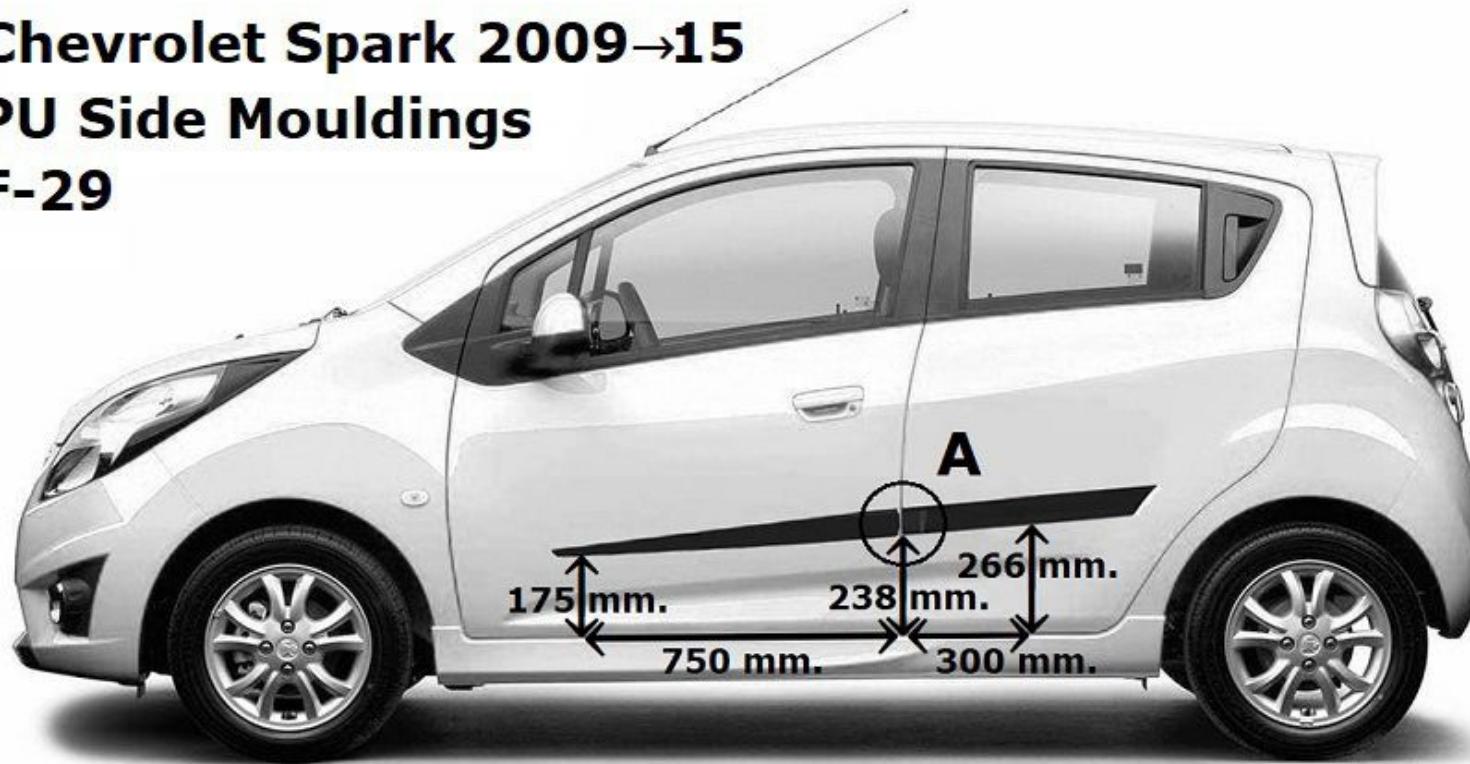

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

