

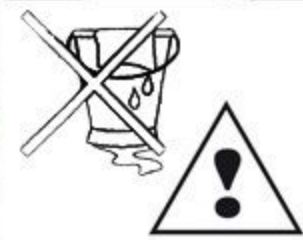
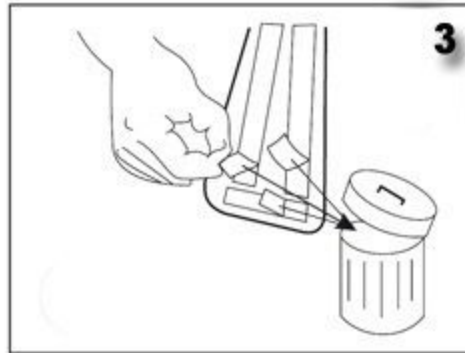
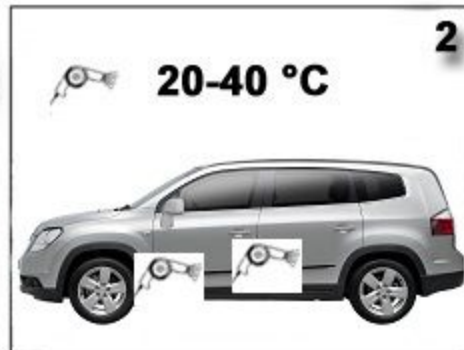


Chevrolet Orlando 2010 → PU Side Mouldings F-34

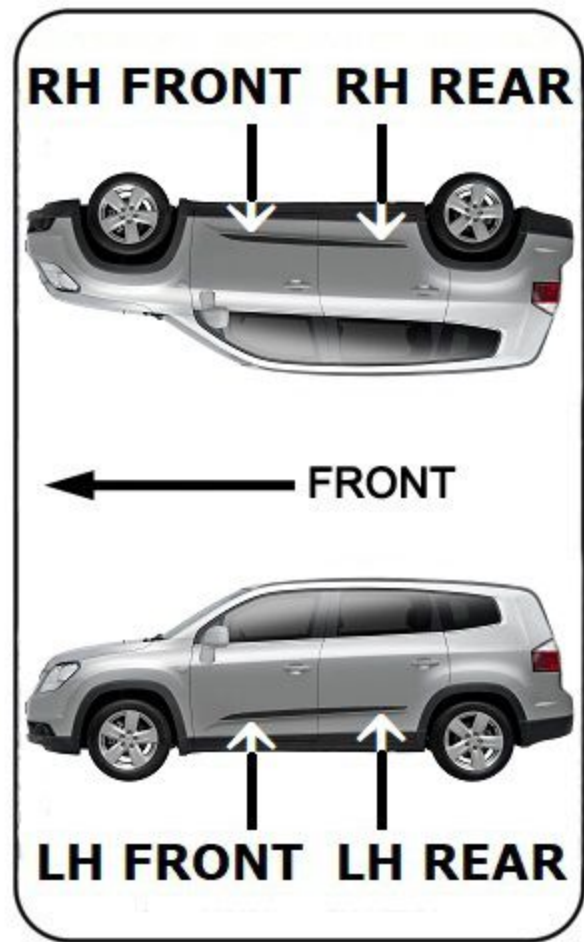

Iedere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

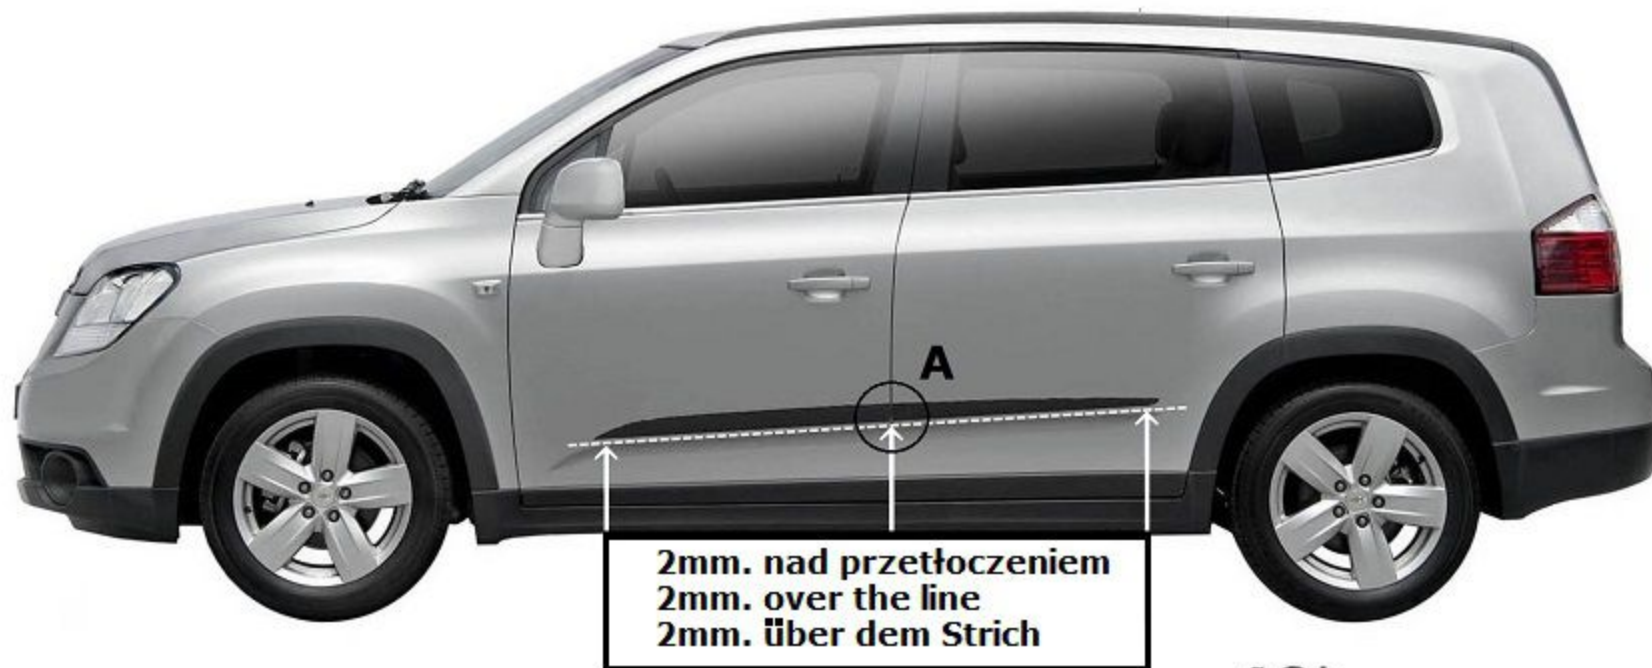