
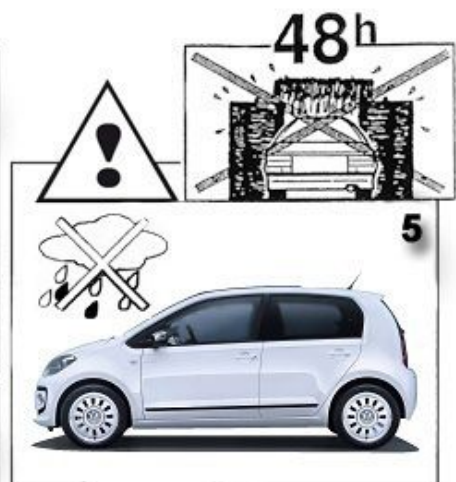
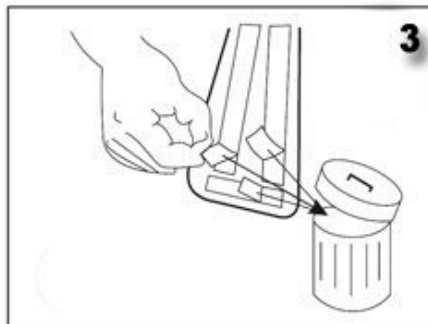
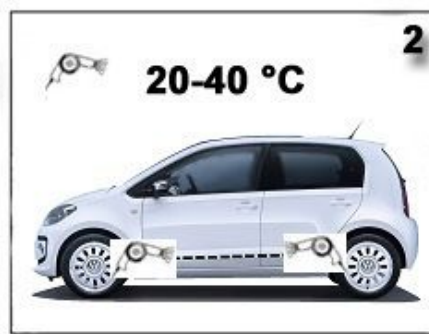


# Volkswagen UP 5D 2011→

## PU Side Mouldings

### F-43

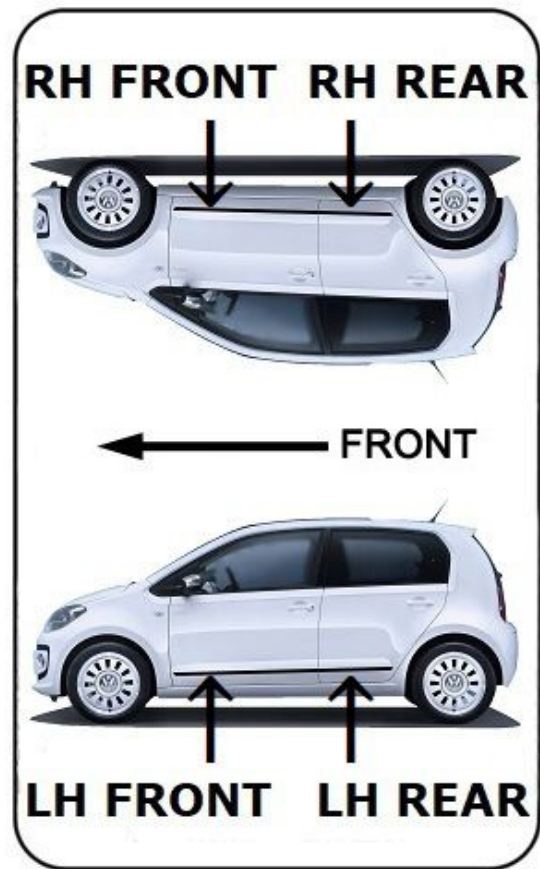

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!

