


Volkswagen UP 3D 2011 →

PU Side Mouldings

F-44

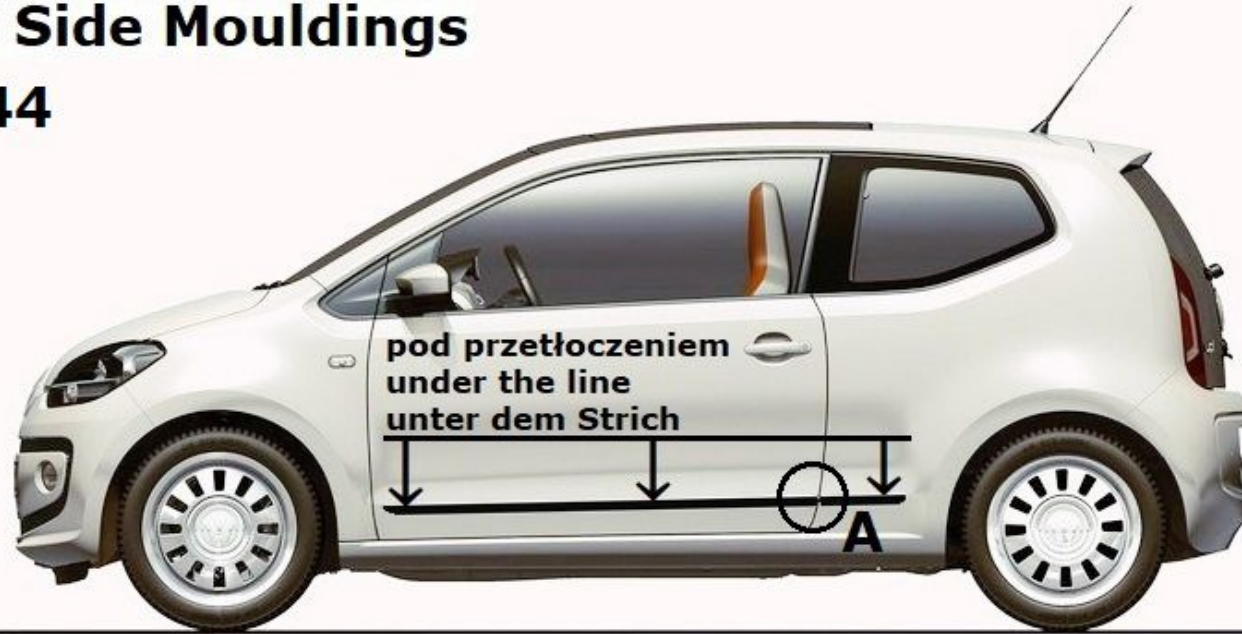




RH FRONT RH REAR



← FRONT



LH FRONT LH REAR

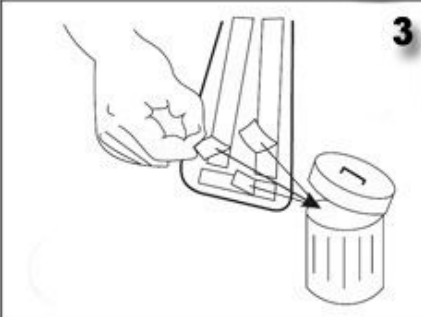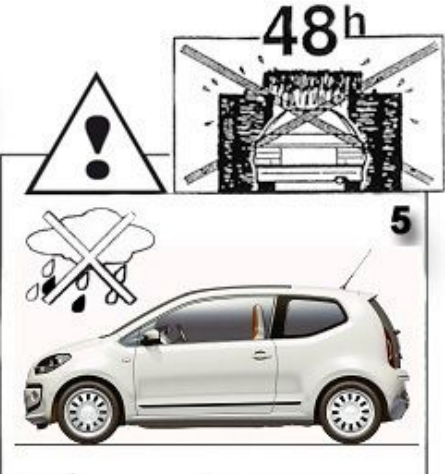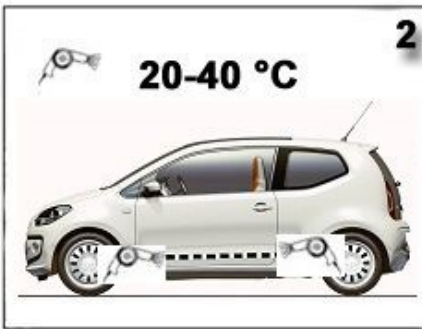

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

